

neon[®]

INSTRUCTION MANUAL

MCB820

Retro Bluetooth Micro System



Table of Contents

Safety Warnings	3
Battery Safety Guidelines	5
Pack Contents.....	6
Product Overview	7
Remote Control Overview	8
Installation of Battery.....	9
Handling the Remote Control.....	9
Remote Control Operation Range.....	10
Connecting the AC Power Cord.....	10
ECO-Power/Standby Mode Features	11
Switching ON / OFF.....	11
Switching the system to ECO Power/Standby mode.....	11
Setting the Clock	11
Setting the Clock Manually.....	11
Automatically Synchronizes Clock Time.....	11
Manual Synchronizes Clock Time	11
Sound Quality	12
Adjusting the Volume.....	12
Mute sound.....	12
Adjusting the Super Bass.....	12
Controlling the Loudness.....	12
Presetting Equalizer	12
Changing the Front Panel Darkness.....	12
FM Radio Operation	13
Tuning in to a Station.....	13
Program radio stations.....	13
To change the FM Reception Mode.....	13
Disc (audio CDs and MP3/WMA discs) Operation.....	14
Disc Playing	14
To Skip Search and Play.....	14
To Search and Play.....	14
Text Display During Playback	14
Programme Play (For audio CDs and MP3/WMA discs)	14
Playing the Beginning (Intro) of each Track.....	15
Random Play.....	15
To Select Album (For MP3/WMA discs)	15
Playing Repeatedly.....	15

Use the USB 16

 Play from USB..... 16

 Charge your device..... 16

Play from Bluetooth device..... 17

Setting the Sleep Timer..... 17

Set the alarm timer..... 18

Listen to an external device 18

Listen to a digital recording device 19

Specifications..... 19

Maintenance 20

 Cleaning the Unit 20

 Handling Discs..... 20

 Cleaning Discs..... 20

 Storing Discs..... 20

Troubleshooting..... 21

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- The product complies with the requirement of the 1999/5/EC directive.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damages. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket before a lightning storm.

Mains Cable

- Make sure the unit or the unit stand is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and create a safety hazard.
- The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference.

If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Class I Laser Product

- This unit utilises a laser. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Before moving the unit, ensure the disc tray is empty.
- Always remove the disc when the unit is not in use.
- Failure to do so will risk severely damaging the disc and the unit.
- Do not stack devices, heat from other devices may affect the performance of the unit.

 


Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure the unit is fully unplugged from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

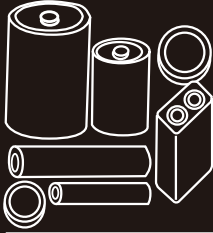


Battery Safety Guidelines

Used correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused — resulting in leakage or, in extreme cases, fire or explosion. Here are some simple guidelines to safe battery use designed to eliminate any such problems.



 Take care to fit your batteries correctly, observing the plus and minus marks on the battery and appliance. Incorrect fitting can cause leakage or, in extreme cases, fire or even an explosion.

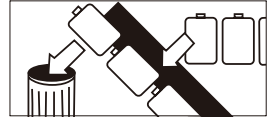

Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types, since this can result in leakage or, in extreme cases, fire or even an explosion.



Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion.



Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time. Otherwise the batteries may leak and cause damage.



Never dispose of batteries in fire as this can cause them to explode. Please recycle dead batteries; do not put with the normal household waste.



 
Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. They may leak, cause fire or even explode. There are special rechargeable batteries which are clearly marked as such.



Supervise children if they are replacing batteries themselves in order to ensure these guidelines are followed.



Remember that small button cell batteries such as used in some hearing aids, toys, games and other appliances, are easily swallowed by young children and this can be dangerous.

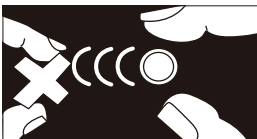

Keep loose button cells away from young children.



 
Make sure battery compartments are secure.




Seek medical advice if you believe a cell has been swallowed.

Pack Contents

Make sure all of the following contents are included.

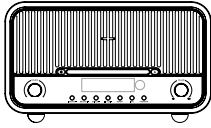


The Unit

 

Remote Control
(battery included)



 
MP3-LINK Cable



Optical Cable





 AC Adaptor




Quick Start Guide

  Product Overview

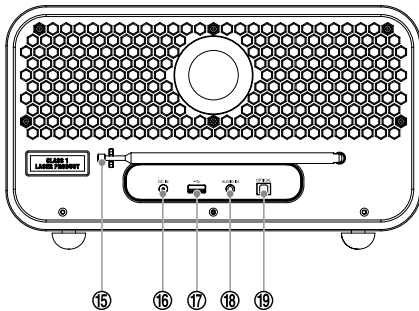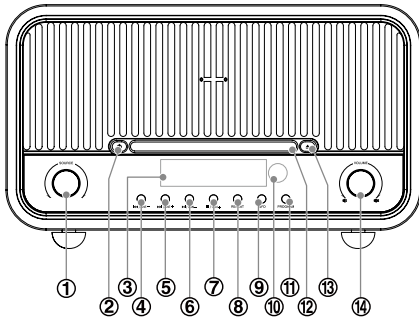

1. Source Knob (**SOURCE**)
2. Standby Button (⏻)
3. LED Display Lens
4. Previous Button (⏮)
Search Backward Button (⏮)
Preset Down Button (**PRE -**)
5. Next Button (⏭)
Search Forward Button (⏭)
Preset Up Button (**PRE +**)
6. Play/Pause Button (⏮)
Tuning Backward Button (**TUN -**)
7. Stop Button (■)
Tuning Forward Button (**TUN +**)
8. Repeat Button (**REPEAT**)
Stereo/mono Select Button (**REPEAT**)
9. Information Button (**INFO**)
10. Remote Sensor
11. Program Button (**PROGRAM**)
Auto Scan Button (**PROGRAM**)
Memory Button (**PROGRAM**)
12. Disc Tray
13. Open/Close Button (⏮)
14. Volume Control Knob
15. Telescopic antenna
16. DC in Socket
17. USB Socket
18. Audio Input Socket
19. Optical Input Socket

 Remote Control Overview

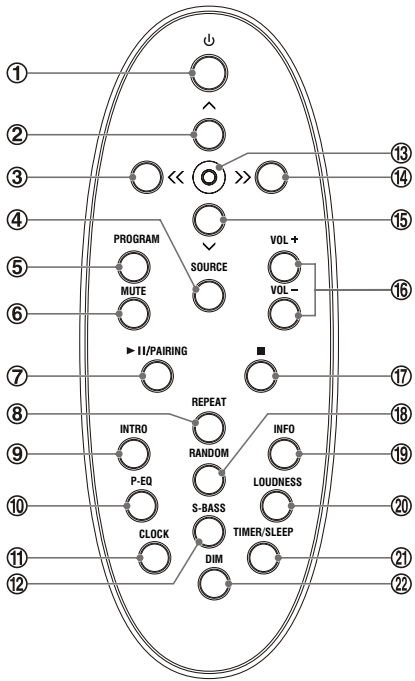


1. Standby Button (⏻)
2. Album Up Button (⤴)
3. Previous Button (⏮)
4. Source Select Button (**SOURCE**)
5. Program Button (**PROGRAM**)
6. Mute Button (**MUTE**)
7. Play/Pause Button (▶||)
8. Repeat Button (**REPEAT**)
9. Intro Button (**INTRO**)
10. Preset Equalizer Button (**P-EQ**)
11. Clock Button (**CLOCK**)
12. Super Bass Button (**S-BASS**)
13. Confirm Button
14. Next Button (⏭)
15. Album Down Button (⤵)
16. Volume Up Button (**VOL +**)
Volume Down Button (**VOL -**)
17. Stop Button (■)
18. Random Button (**RANDOM**)
19. Information Button (**INFO**)
RDS Information Button (**INFO**)
20. Loudness Button (**LOUDNESS**)
21. Timer Button (**TIMER**)
Sleep Button (**SLEEP**)
22. Dimmer Button (**DIM**)

Installation of Battery


For first-time use:

 Remove the protective tab to activate the remote control battery. It is located at the bottom back side of the remote control.

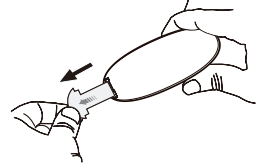


To replace the remote control batteries:

 1. Loosen the screw on the battery compartment cover with a screwdriver. Pull out the battery compartment with your fingernails.

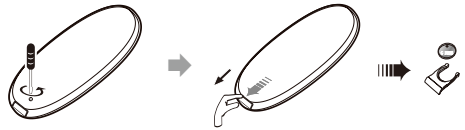

 2. Replace a new battery (size 2025) correctly and fully insert the battery compartment back to the original position. Tighten the screw with a screwdriver.

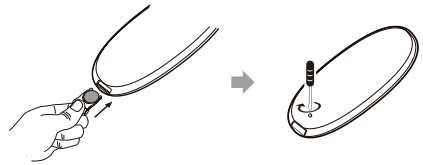


Handling the Remote Control

- Remove the batteries if the remote control is not going to be used for an extended period of time.
- To avoid possible failure, read the following instructions and handle the remote control properly.
- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under the direct sunlight or near sources of excessive heat.
- Do not use caustic cleaners (porcelain, stainless steel, toilet, or oven cleaner etc.) on the remote control, as it may suffer damage.

Note:

Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to leakage of battery.

 Remote Control Operation Range

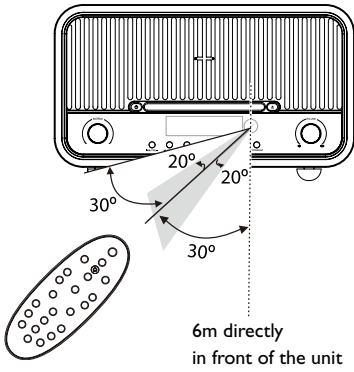


Point the remote control to the unit no more than 6 meters from the remote control sensor and within 60° horizontally and 40° vertically of the front of the unit. The operating distance may vary according to the brightness of the room.

Note:

- Make sure that there is no obstacle between the infrared remote sensor of the unit and remote control. If you install the unit on rack, etc., the remote controllable range may decrease depending on the thickness or colour of glass door of rack.
- Do not expose the infrared remote sensor to direct sunlight or other strong light, such as inverter fluorescent light.

 Connecting the AC Power Cord

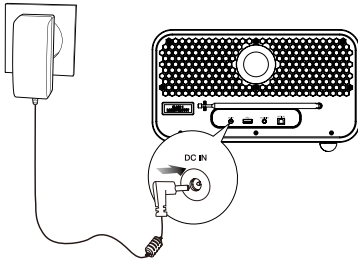

Insert the AC adapter's DC plug into the unit and other side into a wall outlet, and your system is at your command!



Caution:

- * Be sure to unplug the power plug from the outlet when going out or when the unit is not in use for an extended period of time.


ECO-Power/Standby Mode Features

Switching ON / OFF

When you first connect the unit to the AC power, the unit will be in standby mode.

- Press the , the unit switches to the last selected source.
- Press the  button to switch the unit back to standby mode.

Switching the system to ECO Power/Standby mode

Long pressing the  for 2 seconds or more to switch to ECO Power or standby mode.

* ECO Power mode

The clock will not be displayed. Press the **CLOCK** button to display the clock on the LED.

* Clock mode

The clock display on the LED.

 
 


Note:

If the unit is idle for more than 15 minutes, it will automatically switch to ECO-Power mode.

Setting the Clock

Setting the Clock Manually

Caution: You can set the clock in standby mode only.

1. In standby mode, long pressing the **CLOCK** button on the remote control for 2 seconds or more to activate the clock setting mode, the time format [24--H] or [12--H] will blink.
2. Press the   buttons on the unit or  /  buttons on the remote control to select a time format.
3. Press the **CLOCK** button to store the setting, the hour digits blink.
4. Repeat above steps 2-3 to set the hour and minute.





Note:

- If no button is pressed in 10 seconds, the unit exits clock setting mode automatically.
- If a power failure occurs or the unit is disconnected from the mains, the clock setting will be lost.

Automatically Synchronizes Clock Time

In RDS station, the unit can synchronize with time transmitted by RDS station automatically.

Manual Synchronizes Clock Time

In RDS station, long pressing **INFO** button for 2 seconds or more to select to CT (clock time). When received and display a correct CT time, then using   buttons to select "Manual SYMC" and press the   button to confirm manual synchronizes main unit clock time.

Sound Quality

Adjusting the Volume

To increase or decrease the volume, rotate the **VOLUME** knob on the unit or press the **VOL +/-** buttons on the remote control.

Mute sound

You can mute the sound temporarily.

During play, press the **MUTE** button to mute or unmute sound.

Note: If you change the volume or source when the sound is muted, muting is cancelled.

Adjusting the Super Bass

You can reinforce the bass sound to maintain rich, full bass at low volume.

Press the **S-BASS** button on the remote control to get the effect, the “DBB ON” will show in the LED. Press again to cancel the effect, the “DBB OFF” will show in the LED.

Controlling the Loudness

This unit has a loudness function, which can automatically increase the bass sound effect at low volume. It can also increase the bass sound effect at high volume, but it will be relatively less when it is at high volume.

Press the **LOUDNESS** button to obtain the loudness function, the “LOUD ON” will show in the LED. Press again to cancel the effect, the “LOUD OFF” will show in the LED.

Presetting Equalizer

You can adjust the sound according to the genre of the music your taste.

During play, repeatedly press the **P-EQ** button on the remote control to select your preferred sound mode.

- FLAT
- POP
- JAZZ
- ROCK
- CLASSIC

Changing the Front Panel Darkness

To dim or brighten the display, repeatedly press the **DIM** button on the remote control to the desired brightness.

FM Radio Operation

Caution: Before listening to the radio, please check that the FM Antenna is correctly adjusted for length and direction.

Tuning in to a Station

1. Rotate the **SOURCE** knob on the unit or repeatedly press the **SOURCE** button on the remote control to select TUNER source. The word “TUNER” will be displayed on the LED.
2. Select a station using one of the following methods.
 - ♦ **Auto Tuning**
Long pressing the **TUN +/-** buttons on the unit or <</>> buttons on the remote control for 2 seconds or more, the frequency changes down or up automatically until a station is found.
 - ♦ **Manual Tuning**
Repeatedly press the **TUN +/-** buttons on the unit or <</>> buttons on the remote control to change the frequency until you find the station you want.
 - ♦ **Preset Tuning (Available only after the stations are preset)**
Repeatedly press the **PRE +/-** buttons on the unit or √/∧ buttons on the remote control to select the desired preset number. Its band and frequency are displayed on the LED.

Program radio stations

You can program a maximum of 20 preset radio stations (FM).

- ♦ **Automatically**
Long pressing the **PROGRAM** button for 2 seconds or more to activate automatic program mode.
 - “AUTO” is displayed on the LED.
 - All available stations are programmed.
 - The first programmed radio station is broadcast automatically.
 - ♦ **Manually**
 1. Tune to a radio station.
 2. Press the **PROGRAM** button on the remote control to activate program mode. The preset number will blink.
 3. Repeatedly press the √/∧ buttons on the remote control to select a number from 1–20 for this radio station.
 4. Press the **PROGRAM** button on the remote control again to store the station.
 5. Repeat above steps 1 to 4 for each station you want to store in memory with a preset number.
- Note:** If the system is unplugged or if a power failure occurs, the preset stations will not be erased.

To change the FM Reception Mode

Press the **REPEAT** button to select the Stereo or Mono channel to receive the best FM reception mode.

Disc (audio CDs and MP3/WMA discs) Operation

Disc Playing

1. Rotate the **SOURCE** knob on the unit or repeatedly press the **SOURCE** button on the remote control to select DISC source. The word "DISC" will be displayed on the LED.
2. Press the **▲** button on the unit to open the disc door and place the disc on the disc tray (with the printed side up).
3. Press the **▲** button on the unit to close the disc door, the unit will read the disc and play it automatically.
Note: If in stop mode, please press the **▶||** button to start playing the disc.
4. Press the **▶||** button to temporarily stop the playing, press the button again, it will continue to play.
5. Press the **■** button to stop the disc playing.

To Skip Search and Play

- ◆ Press the **◀◀** button on the unit or **<<** button on the remote control once or more to skip previous one or more tracks on the disc.
- ◆ Press the **▶▶** button on the unit or **>>** button on the remote control once or more to skip forward one or more tracks on the disc.

To Search and Play

Long pressing the **◀◀/▶▶** buttons on the unit or **<</>>** buttons on the remote control to search for the position that you intend to start playing.

Text Display During Playback

◆ For audio CD

Repeatedly press the **INFO** button to show the current track number and single elapsed time or single remain time or total elapsed time or total remain time.

◆ For MP3/WMA Disc

Repeatedly press the **INFO** button, ID3 information (song title and artist) scrolls on the display for a few minute or "NO ID3" if there is no ID3 information.

Programme Play (For audio CDs and MP3/WMA discs)

You can programme up to 20 tracks to play in any desired order.

1. Insert a disc and press the **■** button when it starts playing.
2. Press the **PROGRAM** button, the LED will display "001 P-- 01".
3. Press the **◀◀/▶▶** buttons on the unit or **<</>>** buttons on the remote control to select the desired track number.
 - The track number 8, LED display "008 P-- 01".
4. Press the **PROGRAM** button to confirm the track number to be stored.
 - The track number 8, LED display "008 P-- 02".

5. Repeat above steps 3-4 to select and store all desired tracks.
6. Press the ►|| button to start programme play.
7. Press the ■ button once to stop the programme play. Press the ■ button twice to clear programme.

Playing the Beginning (Intro) of each Track

Press the **INTRO** button on the remote control to play the beginning of each track consecutively.

The playing time of each track is 10 seconds.

When you hear the desired track, press the ►|| button twice.

Random Play

The CD can be played randomly.

Random play begins by pressing the **RANDOM** button on the remote control.

To Select Album (For MP3/WMA discs)

- In playing mode, press the ∨/∧ buttons on the remote control to select the next/previous folder and the first file is play automatically.
- In stop mode, press the ∨/∧ buttons on the remote control to select the next/previous folder and press the ►|| button to start play from first file.

Playing Repeatedly

During play, repeatedly press the **REPEAT** button to select:

- For audio CD

- **RPT ONE** : The current track is played repeatedly.
- **RPT ALL** : All tracks are played repeatedly.
- To cancel the repeat playing.

 
- For MP3/WMA Disc


- **RPT ONE** : The current track is played repeatedly.
- **RPT FOLD**: All tracks in folder are played repeatedly .
- **RPT ALL** : All tracks are played repeatedly.
- To cancel the repeat playing.

Use the USB


Play from USB

Note: Ensure that the USB device contains playable audio contents for supported formats.

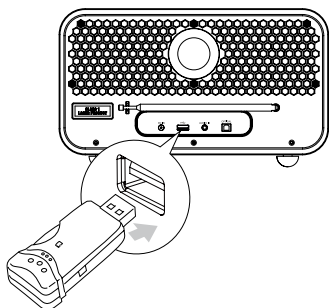

1. Insert the USB device into the  socket on the rear of the unit.
2. Rotate the **SOURCE** knob on the unit or repeatedly press the **SOURCE** button on the remote control to select USB source. The word "USB" will be displayed on the LED.
3. The device's stored music will be played automatically.
4. When you store more than one folder in the USB device, use the ∇/\wedge buttons on the remote control to select the next/previous folder and press \ll/\gg buttons to select a file, and then press the $\blacktriangleright \parallel$ button to start play.

Charge your device

You can charge your device through the  socket on this product with a USB cable.

Note:

- * The maximum current for USB charging is 5V \equiv 1A.
- * Not all devices for USB charging are guaranteed.

Play from Bluetooth device

Note:

- * Pairing needs only to be done once. The operational range is approximately 10 meters.
- * Compatibility with all Bluetooth devices is not guaranteed.
- * Any obstacle can reduce the operational range.

1. Rotate the **SOURCE** knob on the unit or repeatedly press the **SOURCE** button on the remote control to select Bluetooth source. The word "BT" will be displayed on the LED.
2. Activate the Bluetooth function in your Bluetooth device (see the device user manual).
3. Select "MCB820" on your device for pairing.
 - For older devices, you need to input "0000" as pairing password.
4. Start music play on your Bluetooth device, you can use this unit to control the function to your Bluetooth device.
 - To pause/resume play, press ►||.
 - To skip to a track, press <</>>.
 - To increase or decrease the volume, press **VOL +/-**.
5. Long pressing the **PAIRING** button on the remote control for 2 seconds or more to disable the Bluetooth function from your Bluetooth device.

Note:

- * The device will also be disconnected when the device is moved beyond the operation range.
- * If you want to reconnect the device to the unit, place it within the operational range.
- * This unit supports A2DP (Advanced Audio Distribution Profile).

Setting the Sleep Timer

When the unit is turned on, repeatedly press the **TIMER/SLEEP** button to select a set period of time (in minutes):

- [SLEEP 120]
- [SLEEP 90]
- [SLEEP 60]
- [SLEEP 30]
- [SLEEP 15]

When sleep timer is activated, the "Z²" is displayed.

To deactivate sleep timer

When the unit is turned on, repeatedly press the **TIMER/SLEEP** button until "SLEEP 00" is displayed, the "Z²" is disappears.

Set the alarm timer

This unit can be used as an alarm clock. You can select DISC, TUNER or USB as the alarm source.

Caution: Make sure that you have set the clock correctly.

1. In standby mode, long pressing the **TIMER/SLEEP** button on the remote control for 2 seconds or more, the “☉” will blink and the source is displayed, e.g. DISC.
2. Press the **◀◀/▶▶** buttons on the unit or **▼/▲** buttons on the remote control to select a source (DISC, USB or TUNER).
3. Press the **TIMER/SLEEP** button to store the setting, the hour digits blink.
4. Repeat steps 2-3 to set the hour, minute and adjust volume.

Note:

 
- * If disc/USB source is selected and the audio cannot be played, TUNER is activated automatically.
- * If no button is pressed in 30 seconds, the unit exits timer setting mode automatically.

To deactivate or re-activate an alarm timer

Repeatedly press the **TIMER/SLEEP** button to activate or deactivate timer.


- If timer is activated, “☉” is displayed.

Listen to an external device

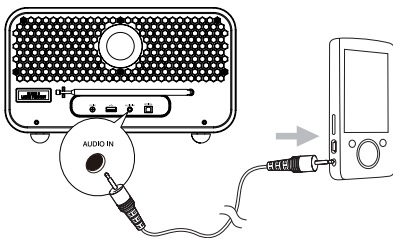

1. Connect the AUDIO IN terminals on the rear of the unit to the headphone socket on the external device with the MP3-LINK cable.
2. Rotate the **SOURCE** knob on the unit or repeatedly press the **SOURCE** button on the remote control to select AUDIO IN source. The word “AUDIO IN” will be displayed on the LED.
3. Start to play on the device (see the user manual of the external device).

 Listen to a digital recording device

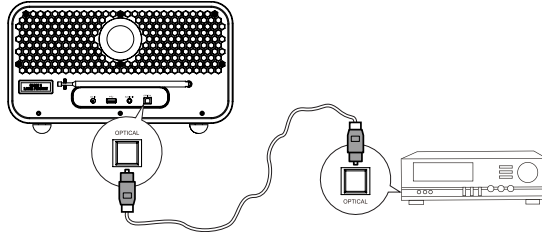

1. Connect the OPTICAL jack on the rear of the unit to the DIGITAL IN jack on a digital recording device (such as DTS-Digital Theatre compatible, with Dolby Digital decoder) with the single cable.
2. Rotate the **SOURCE** knob on the unit or repeatedly press the **SOURCE** button on the remote control to select OPTICAL source. The word "OPTICAL" will be displayed on the LED.
3. Start to play on a digital recording device (see the user manual of the digital recording device).

Specifications

Power requirements	:	16V $\overline{\text{---}}$ 1.8A
FM Tuning Range	:	87.5 - 108 MHz
Output Power	:	15W x 2
THD	:	\leq 1%
USB Port	:	5V $\overline{\text{---}}$ 1A
Speaker Impedance	:	6 Ω
Speaker Input Power	:	15W
Dimensions	:	310(W) x 179(H) x 252(D) mm

Bluetooth Specification

Communication system	:	Bluetooth Standard version 2.1 and EDR specification
Output	:	Bluetooth Standard Power Class 2
Maximum communication Range	:	approx.8m
Frequency band	:	2.4 GHz Band (2.4000 GHz - 2.4835 GHz)
Compatible Bluetooth profiles	:	Advanced Audio Distribution Profile (A2DP)
Supported Multi devices pairing	:	up to 8 devices
Supported codecs (Receive)	:	SBC(Sub Band Codec)
(Transmit)	:	SBC(Sub Band Codec)

Maintenance

Cleaning the Unit

Note: Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.

Handling Discs



Playback side



- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.

Cleaning Discs



- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

Storing Discs

- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

Troubleshooting

If you are having a problem with your unit, check this list for a possible solution before calling for service.

If you cannot solve the problem from the hints given here, or the unit has been physically damaged, call a qualified person, such as your dealer, for service.

No power

- Ensure that the AC adaptor plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- To save power, the unit switches to standby automatically 15 minutes after a play reaches the end and no control is operated.

Remote control does not work

- Before pressing any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/- signs) aligned as indicated.
- Replace the batteries.
- Aim the remote control directly at the sensor on the front of the unit.

No disc detected

- Insert a disc.
- Check if the disc is inserted with the print side facing inward.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

No sound or poor sound

- Adjust the volume.
- Check if in muting.

Disc does not play

- Insert a readable disc and ensure that the label side faces up.
- Check for any scratches or smudges on the disc.
- Moisture has condensed inside the system. Remove the disc and leave the system turned on for about an hour. Disconnect and reconnect the AC adaptor plug, and then turn on the system again.
- As a power-saving feature, the system turns off automatically 15 minutes after disc play reaches the end and no control is operated.

Poor radio reception

- Fully extend and adjust the FM antenna.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

- The USB device is incompatible with the unit. Try another one.

Music playback is unavailable on this unit even after successful Bluetooth connection.

- The device cannot be used to play music through this unit wirelessly.

The audio quality is poor after connection with a Bluetooth-enabled device.

- The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.

Cannot connect with this unit.

- The device does not support the profiles required for this unit.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device to find out how to enable the function.
- This unit is not in pairing mode.
- This unit is already connected with another Bluetooth-enabled device. Disconnect that device and then try again.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the AC adaptor plug has been disconnected.
- Reset the clock/timer.



Use only power supplies listed in the user manual.



This product complies with the requirement of the 2014/30/EU, 2014/35/EU, 2014/53/EU directive.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.